


Required Tools

measuring
tape



drill with
2mm bit



phillips bit or
screwdriver



pencil



knife



Included Hardware

Only relevant hardware is included with your delivery.



Pin Side
Installation Bracket



Motor Side
Installation Bracket



Battery Pack &
Clips



Screws for Wood,
Metal or Wall
Plugs




Wall Plugs for
Brick or Cement
using a 6mm bit

1

Installation Brackets

Installing inside the window frame...

- Take note to position brackets away from window handles and other obstructions allowing the blind to operate freely. Often the bracket will be flush with the front of window frame.
- Slide bracket covers onto brackets, if not already done.
- Position Motor Side bracket inside window frame at the top corner and mark where the 2 screws will go.
- Take note of the measurement from bracket to the front of window frame.
- Position Pin Side bracket inside window frame at the opposite top corner, at the same measurement to the front of window frame and mark where the screws will go.
- We recommend drilling pilot holes for the screws using a 2mm bit.
- Fix the brackets into position using 2 screws for each bracket.

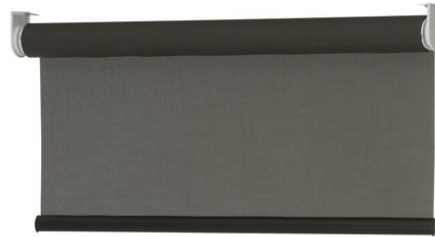

Installing outside the window frame...

- Position the Motor Side bracket at the top corner of where the blind will sit and mark where the 2 screws will go (often edge of architrave).
- Position the Pin Side bracket at the opposite top corner of where the blind will sit and mark where the 2 screws will go.
- We recommend using a spirit level to align brackets if not on architrave.
- We recommend drilling pilot holes for the screws using a 2mm bit.
- Fix the brackets into position using 2 screws for each bracket.

Feedback?

We would love to know how you went with your installation...

Please write a review on our website letting us know your experience with Veneta Blinds

www.venetablinds.com.au

2

Install Blind

- With the blind still rolled up...
- Slip the motor end of blind into the Motor Side bracket.
- Slide the other end of blind into the Pin Side bracket, and note the spring-loaded pin will click into place.




Motorised AA Battery Roller Blind

Installation continued...

3 Install Battery Tube

- Attach the battery clips to the window frame: Position the battery clips evenly along the battery tube within reach of the motor cord using one 25mm screw for each clip.
- Insert the battery tube into the battery tube clips.
- Optional: place the rubber rings onto the battery tube for a tighter fit.
- Connect the battery tube to the motor of the blind.

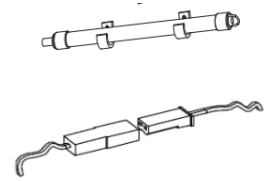

Operating your Blind


- To operate your new Motorised Roller blind, press briefly the UP or DOWN button.
- To stop the shade, press the MY button.

Extra Settings

The remote and upper and lower limits of the blind have been pre-programmed in the factory.

1 Resetting Blind and Remote

- **NOTE: Repeat any steps where the blind does not jog.**

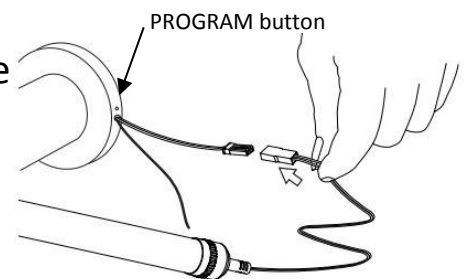

- Press & hold the PROGRAM button on the Roller blind until the blind jogs 3 times.
- Press & hold the same PROGRAM button on the Roller blind until the blind jogs once.
- Press the PROGRAM button on the back of the remote.
- The blind will jog once. The remote is now connected.

- Press the UP button to move the blind to where you want the upper limit to be.
- Press & hold the MY and DOWN buttons until blind starts to move, then release immediately.
- Press the MY button to stop the blind.
- Press the DOWN button to move the blind to where you want the lower limit to be.
- Press & hold the MY & UP buttons until blind starts to move, then release immediately.
- If no response, press and hold the MY & UP buttons until blind starts to move, then release immediately.
- Press the MY button to stop the blind.
- Press & hold the MY button until the blind jogs once. The limits are now set.

Need HELP?

Call our
Customer Service team
for assistance

1300 836 382

Maintaining your Blind

1 Dusting

- Dust can be removed using a feather duster or vacuum with brush attachment on low suction.

2 Spot Cleaning

- Use a warm damp cloth or a mild detergent for tougher stains.
- Dab the affected area, but do not rub the fabric. Finish with just a warm damp cloth.
- Allow the fabric to dry in the lowered position.