


# Motorised Roller Blind (hard wired)

**IMPORTANT: Electrician required for installation.**

## Required Tools

measuring  
tape




drill with  
2mm bit



phillips bit or  
screwdriver



pencil



knife



## Included Hardware

The hardware can be found in the small plastic bag included with your blind.



Pin Side  
Installation Bracket



Motor Side  
Installation Bracket



Remote Control



240 Volt  
Extension Cable



Screws for Wood,  
Metal or Wall  
Plugs




Wall Plugs for  
Brick or Cement  
using a 6mm bit

## 1

### Installation Brackets

#### *Installing inside the window frame...*

- Take note to position brackets away from window handles and other obstructions allowing the blind to operate freely. Often the bracket will be flush with the front of window frame.
- Slide bracket covers onto brackets, if not already done.
- Position Motor Side bracket inside window frame at the top corner and mark where the 2 screws will go.
- Take note of the measurement from bracket to the front of window frame.
- Position Pin Side bracket inside window frame at the opposite top corner, at the same measurement to the front of window frame and mark where the screws will go.
- We recommend drilling pilot holes for the screws using a 2mm bit.
- Fix the brackets into position using 2 screws for each bracket.

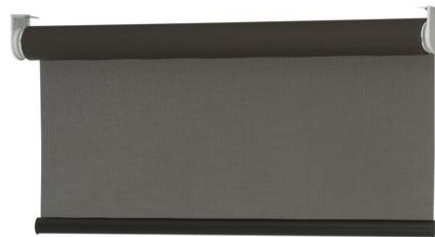

#### *Installing outside the window frame...*

- Position the Motor Side bracket at the top corner of where the blind will sit and mark where the 2 screws will go (often edge of architrave).
- Position the Pin Side bracket at the opposite top corner of where the blind will sit and mark where the 2 screws will go.
- We recommend using a spirit level to align brackets if not on architrave.
- We recommend drilling pilot holes for the screws using a 2mm bit.
- Fix the brackets into position using 2 screws for each bracket.

## 2

### Install Blind

- With the blind still rolled up...
- Slip the Motor end of blind into the Motor Side bracket.
- Slide the other end of blind into the Pin Side bracket, and the spring loaded pin will click into place.



Need HELP?

Call for assistance

**1300 836 382**

Your Remote and Blind is programmed ready to go!

## Operating your Blind

- To operate your new Motorised Roller blind, press the UP (^) or DOWN (v) button
- To stop the shade, press the STOP (-) button.

## Maintaining your Blind

### 1 Dusting

- Dust can be removed using a feather duster or vacuum with brush attachment on low suction.


### 2 Spot Cleaning

- Use a warm damp cloth or a mild detergent for tougher stains.
- Dab the affected area, but do not rub the fabric. Finish with just a warm damp cloth.
- Allow the fabric to dry in the lowered position.

## Troubleshooting Remote & Motor Settings

### Connecting Remote to Blind

Hold P1 button  
on motor

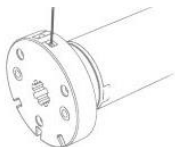

Hold STOP  
on remote



Motor Response



Motor Response



### Changing Upper Limits

Hold UP and STOP  
on remote




Move blind to  
desired  
position

To save upper limit  
hold UP and STOP



Motor Response



Motor Response



### Changing Lower Limits

Hold DOWN and STOP  
on remote



Move blind to  
desired  
position

To save upper limit  
hold DOWN and STOP



Motor Response



Motor Response



## Need HELP?

Call our  
Customer Service Team  
for assistance

**1300 836 382**